


TV Remote Control (Shaw)

Controls: Samsung TV + Shaw TV Box + Sound Bar

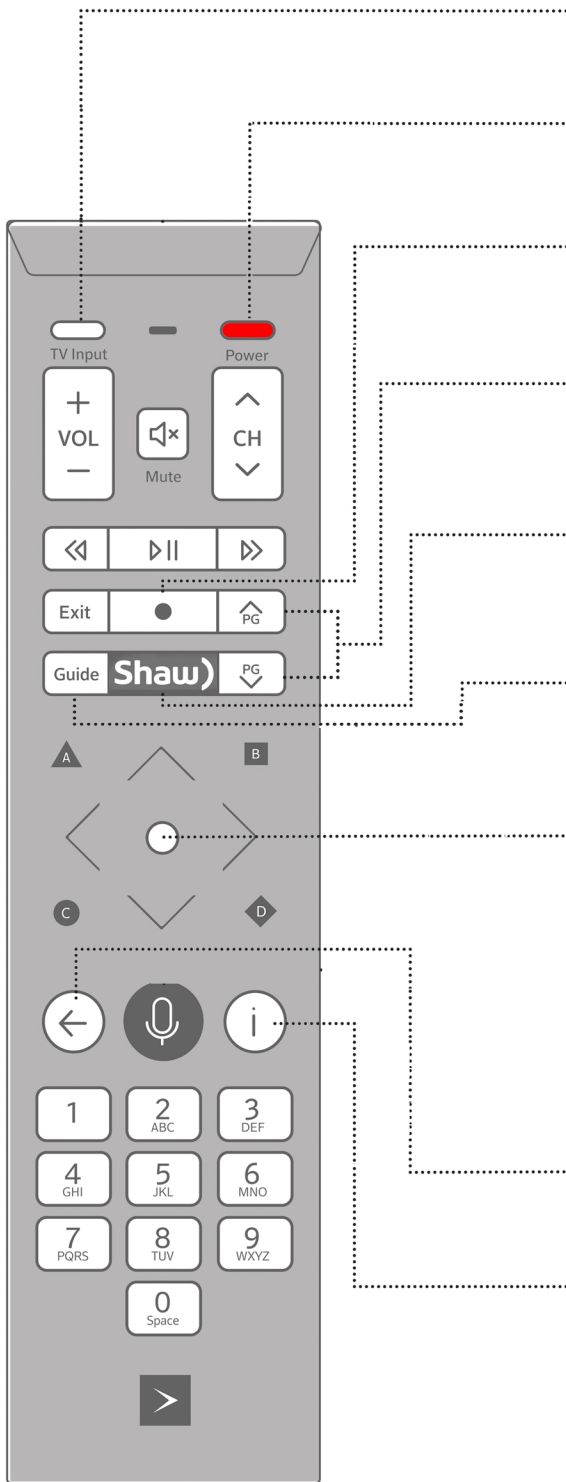

TV input

Goes to the next input of your TV.

Power

Turns On/Off the TV Box + TV + Soundbar.

Record

Starts recording the show that's playing or lets you schedule a recording in the Guide.

Page Up/Page Down

Lets you skip ahead in the Guide and skip forward/back when watching recordings

Shaw) menu

Access to search, settings, On Demand content, your recordings, apps and Guide.

TV Guide

Enjoy a full assortment of TV channels.

Navigation pad

Middle button: selects an item on the screen.

Arrows: used to navigate the screen.

A: Displays the Help menu

B: Displays accessibility settings

C: Launches the Sports application

D: Deletes a recording or a group of recordings

Back arrow

Returns to previous screen.

Info

Displays detailed information about the TV program.

NETFLIX (log in using your Netflix account)

1) Press the **Shaw button** on remote

2) Select **Apps**

3) Select **Netflix** in the entertainment section

On Demand & Pay-Per-View

These services are locked and NOT available.

For more information search online 'Shaw BlueCurve XR15 Remote'